



No	Part	Qty
1	Head board panel	1
2	Cushion	1
3	Soleplate bottom	1
4	Plastic feet (107X69X167H)	4


No	Part	Qty
A	 Spanner (5MM)	1
B	 Screw M8x40	8
C	 Screw M6x35	6
D	 Screw M8x45	6
E	 Gasket M8 (φ20X2.0mm)	6
F	 Spring Gasket M8	6




- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.

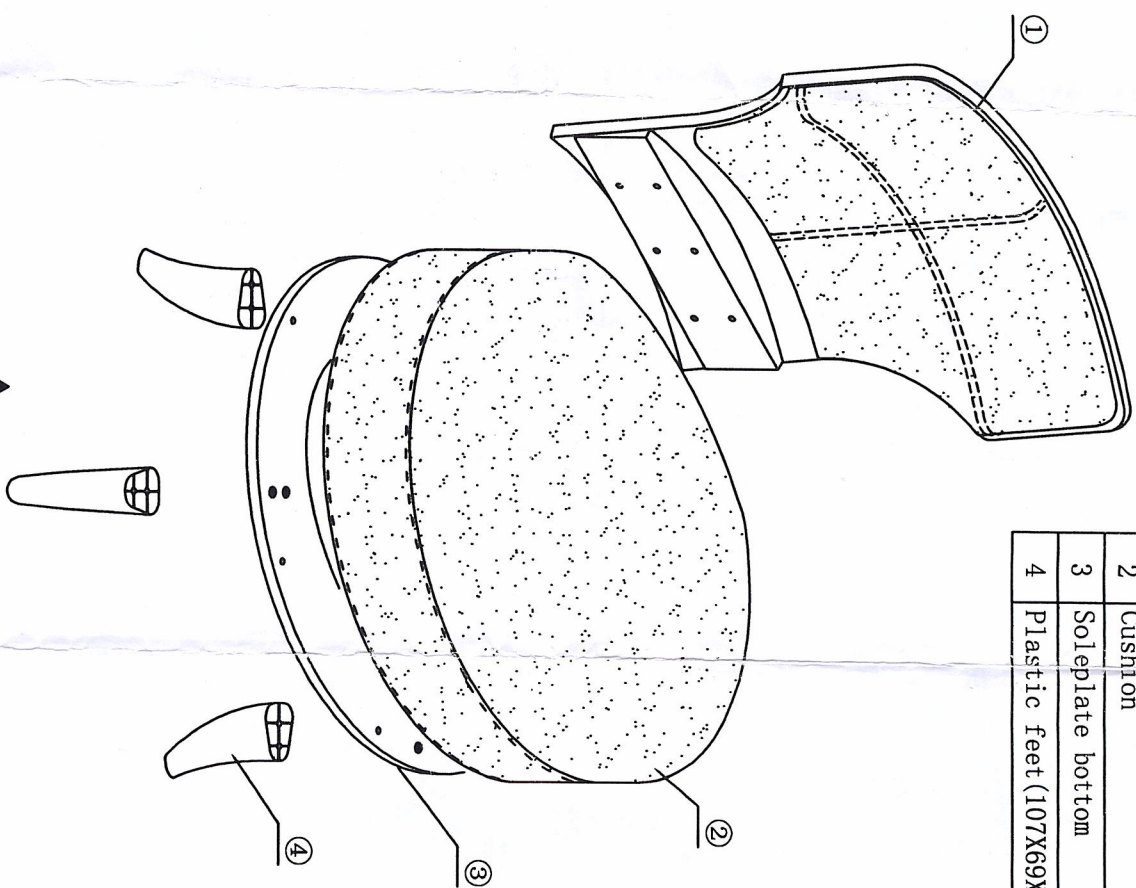

15min

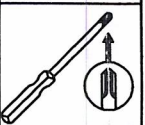


STEP 1

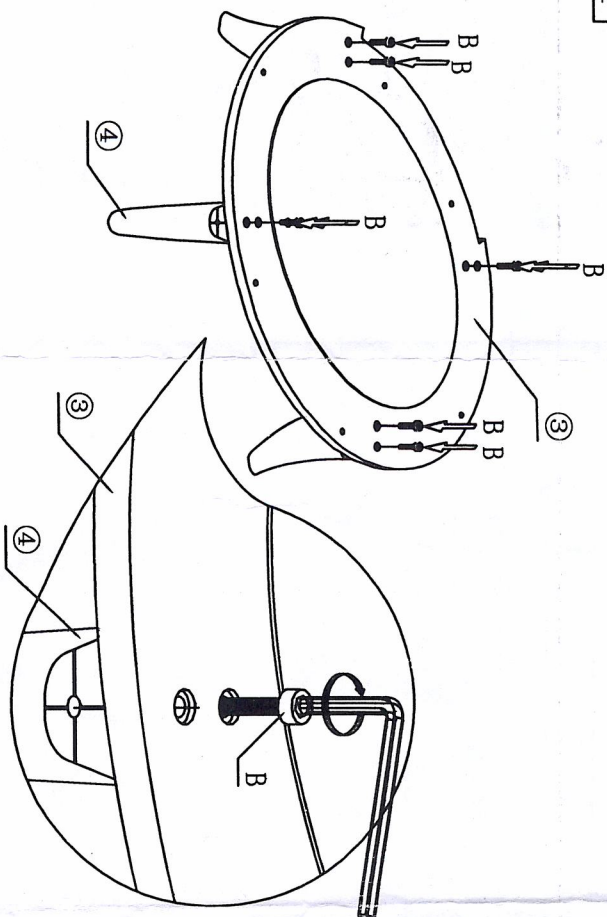

Screw M8x40
Bx8

Spanner 5mm
Ax1

STEP 2

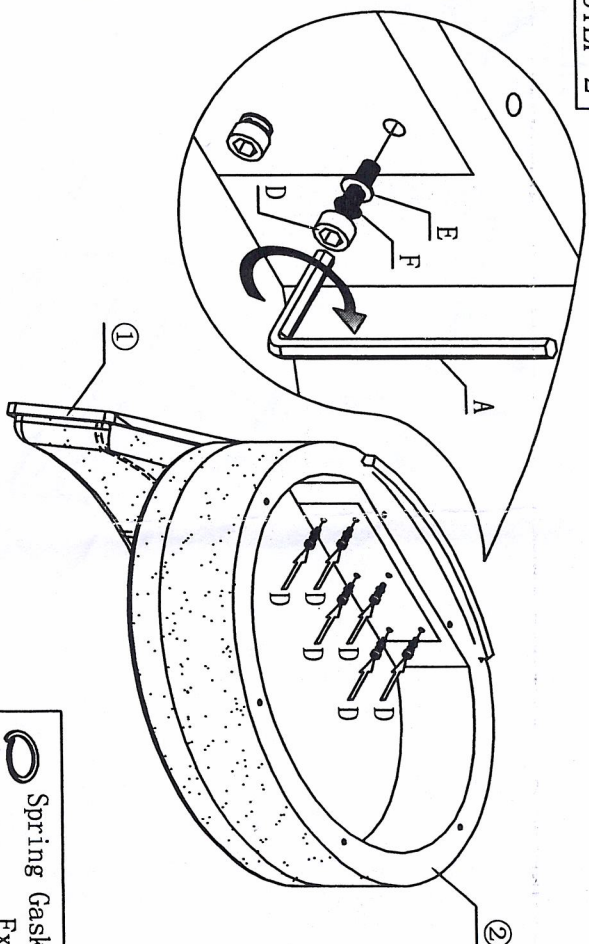


Gasket M8
($\phi 20 \times 2.0 \text{ mm}$)
EX6

Screw M8x45
Dx6

Spring Gasket
Fx6


Spanner 5mm
Ax1

STEP 3

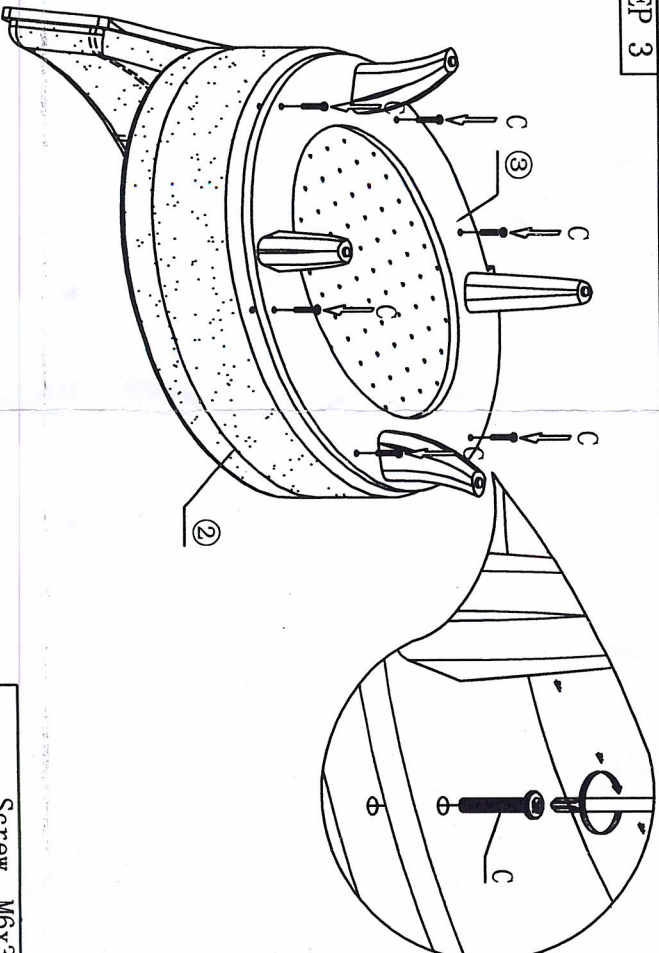



Screw M6x35
Cx6

STEP 4

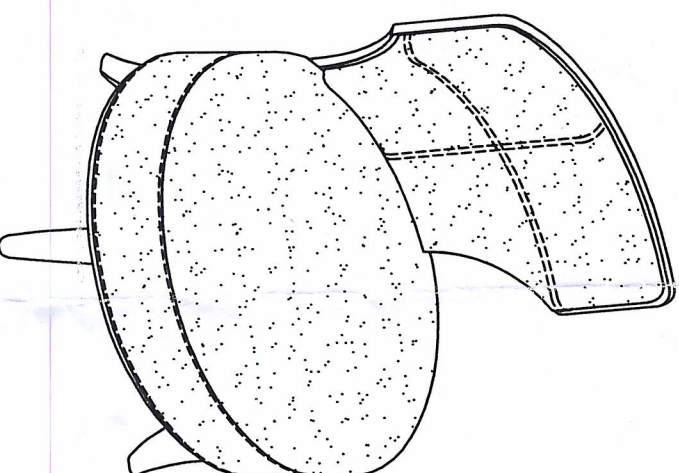

No	Part	Qty
1	Faceplate Top	1
2	Foot A	1
3	Foot B	1
4	Pedestal	1
5	Glass face	1


No	Part	Qty
A	 Screw M6x25	4
B	 Quickfit (ø5X33)	4
C	 Cam ø15X12	4
D	 Spanner (4mm)	1

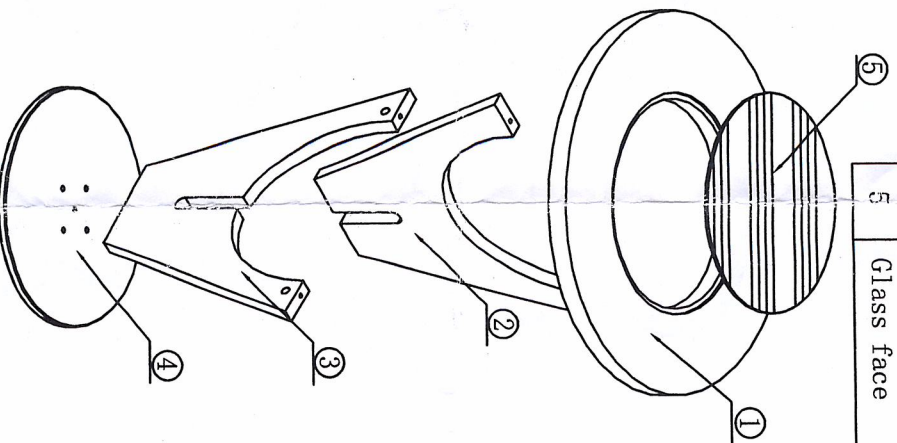


- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.



10min

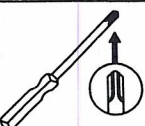


STEP 1

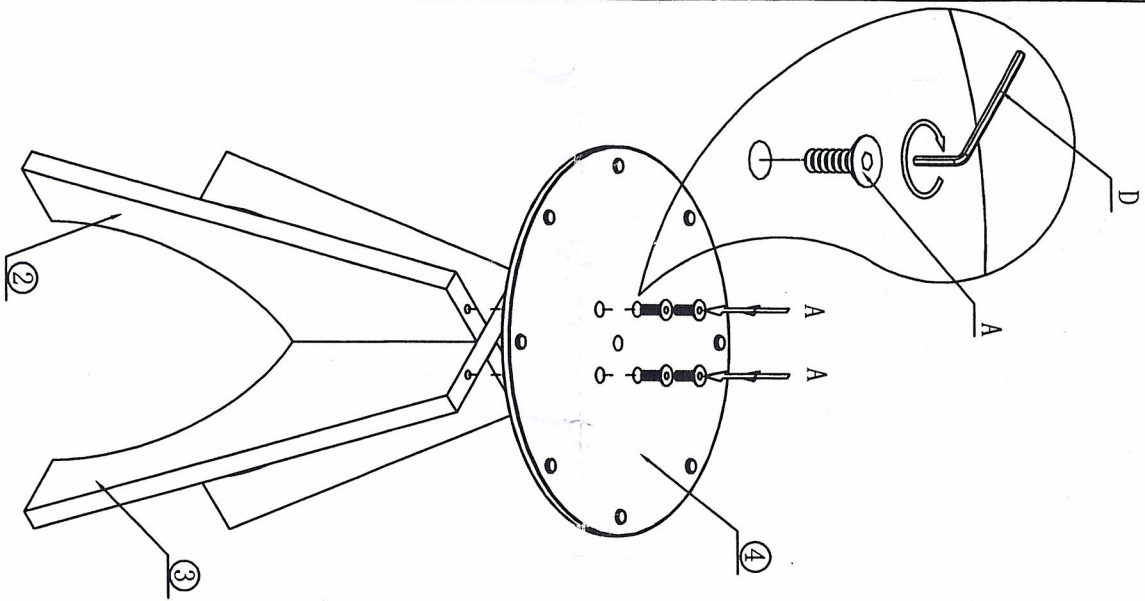

- M6x25 Ax4
- Spanner Dx1

STEP 2

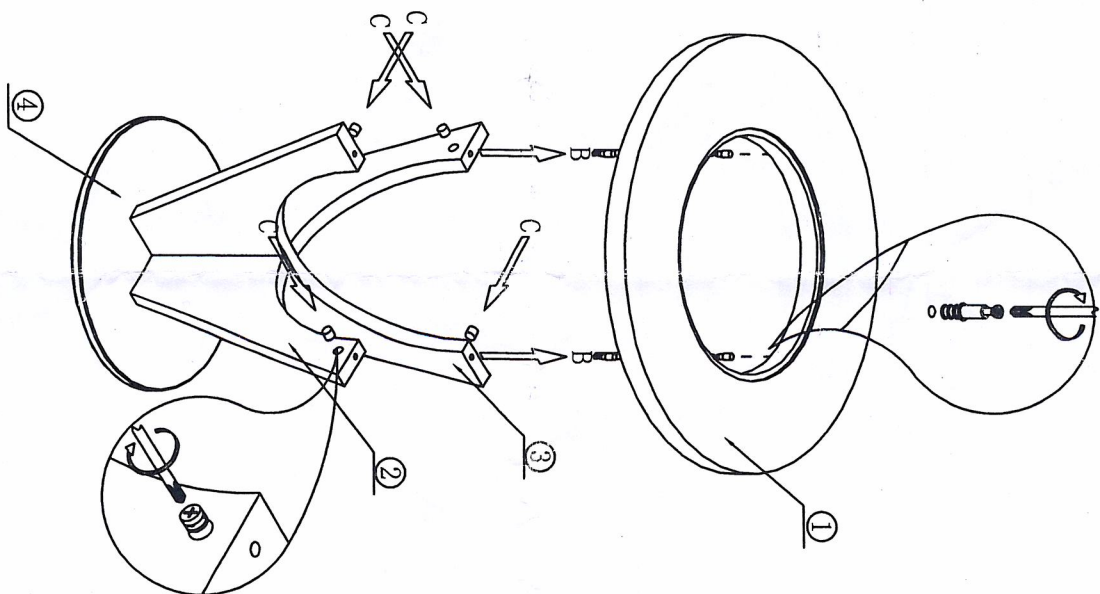

- $\phi 5 \times 33$ Bx4
- $\phi 15 \times 12$ Cx4

STEP 3

