

SUZIE SQUARE TABLE  
800+400  
TSUZIEAM



- Thank you for purchasing the SUZIE SQUARE TABLE. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).
- Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.
- It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.
- If you experience any problems with your new purchase please contact your store of purchase for assistance.

---

Care Information.

Avoid sharp objects and rough surface during assemble.

---

Hardware. (Supplied)

Please refer to the attached Assembly Instruction.

Tools Required. (Not Supplied)

None.





---

Parts.

Please refer to the attached Assembly Instruction.

**ASSEMBLY INSTRUCTION.**

**MODEL: SUZIE SQUARE TABLE  
800+400**

NO.	ITEM	DESCRIPTION	QTY
A		M8X60mm JCBC SCREW	8PCS
B		SPRING WASHER	8PCS
C		FLAT WASHER	8PCS
D		M5 ALLEN KEY	1PC

NOTE: PART LIST AND HARDWARE SHOWN IS PER/PC TABLE.

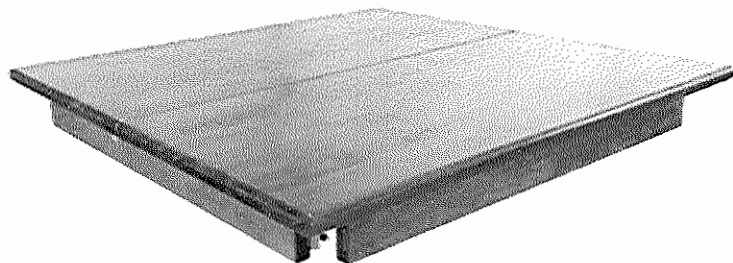


TABLE TOP (QTY: 1PC)




TABLE LEG (QTY: 4PCS)

-TIGHTENING THE TABLE LEG TO TABLE TOP WITH M8X60mm JCBC SCREW, SPRING WASHER AND FLAT WASHER. (X8)



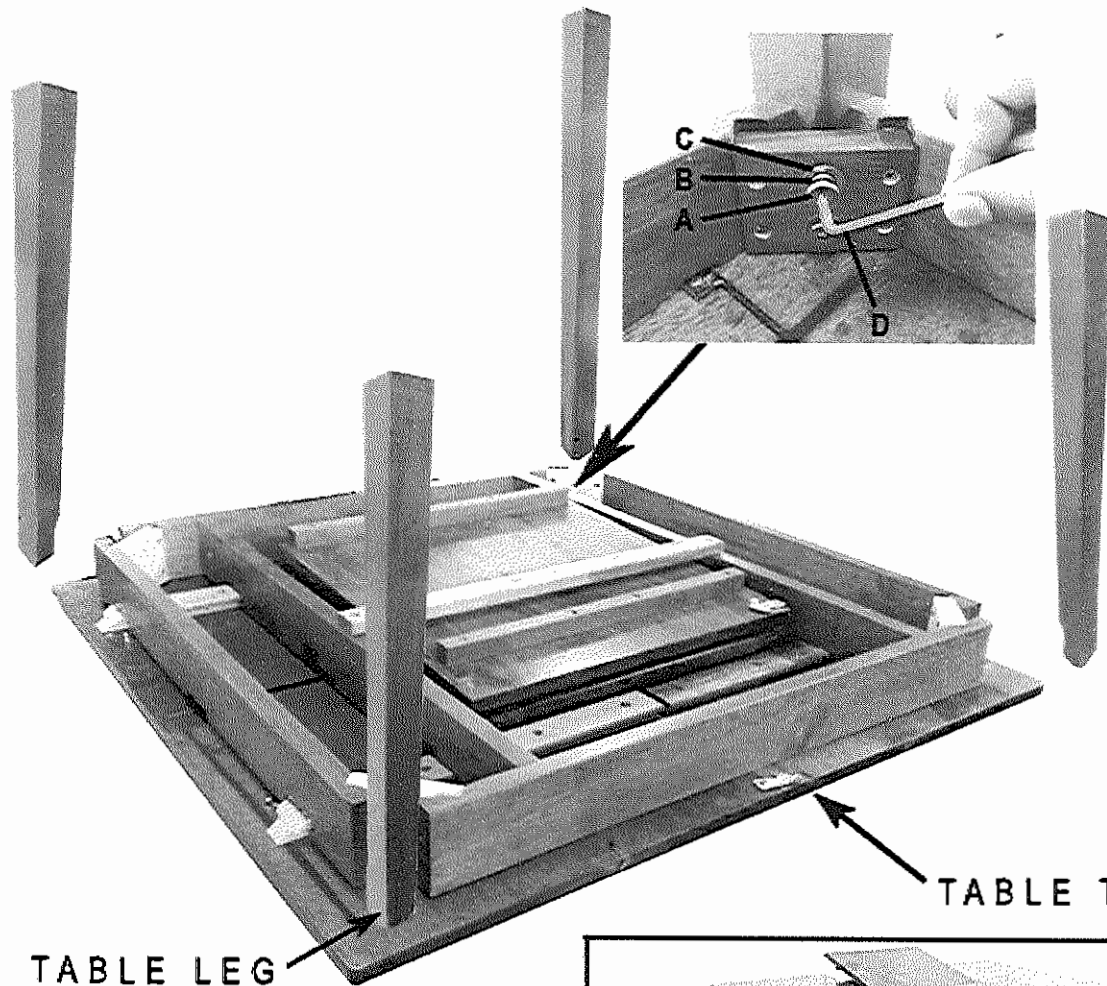


TABLE LEG

TABLE TOP

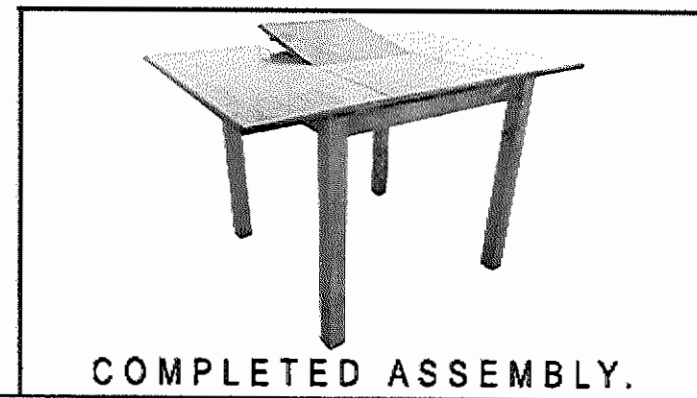

COMPLETED ASSEMBLY.



# ASSEMBLY INSTRUCTION.

MODEL : JAVA CHAIR

## HARDWARE.

CODE	PART	DESCRIPTION	QTY
A		M6X45mm JCBC SCREW	6 PCS
B		SPRING WASHER	10PCS
C		FLAT WASHER	10PCS
D		M4X32mm CHIPBOARD SCREW	6 PCS
E		M4 ALLEN KEY	1 PC
F		M6X 60mm JCBC SCREW <i>(For Front Leg Only)</i>	4 PCS



BACK PANEL : 1PC



BOX SEAT: 1PC




LOWER FRAME: 1PC



FRONT LEG : 2PCS



SOLID SEAT : 1PC

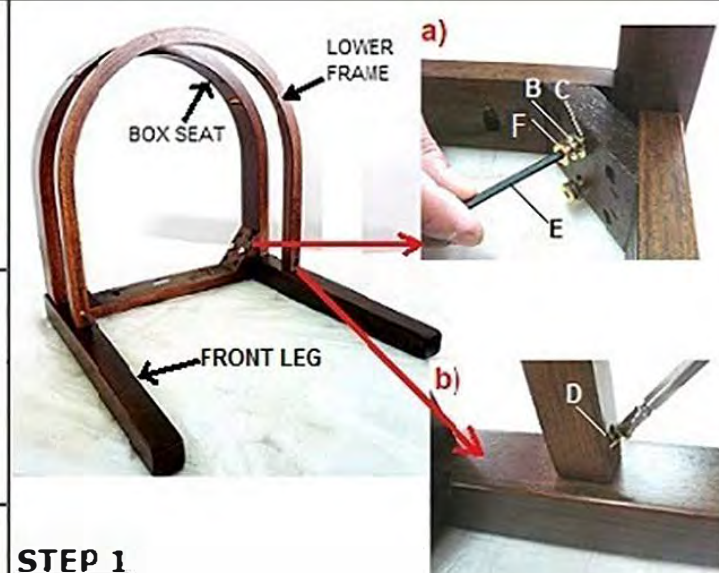


### STEP 1

a) BY TIGHTENING THE FRONT LEG WITH M6 X 45MM JCBC SCREW, SPRING WASHER AND FLAT WASHER. (X 4)

b) SCREW ON THE LOWER FRAME WITH M4 X 32MM CHIPBOARD SCREW. (X 2)  
(SCREW DRIVER REQUIRED)


NOTE: HARDWARE AND PART LIST SHOWN IS PER/PC CHAIR

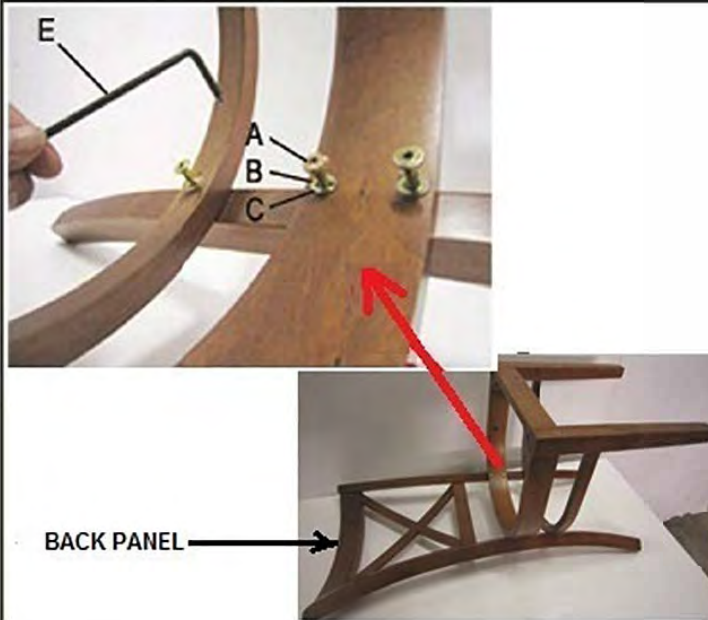

BACK PANEL

### STEP 2

SCREW ON THE BOX SEAT AND LOWER FRAME TO BACK PANEL WITH M6 X 45MM JCBC SCREW, SPRING WASHER AND FLAT WASHER. (X 6)

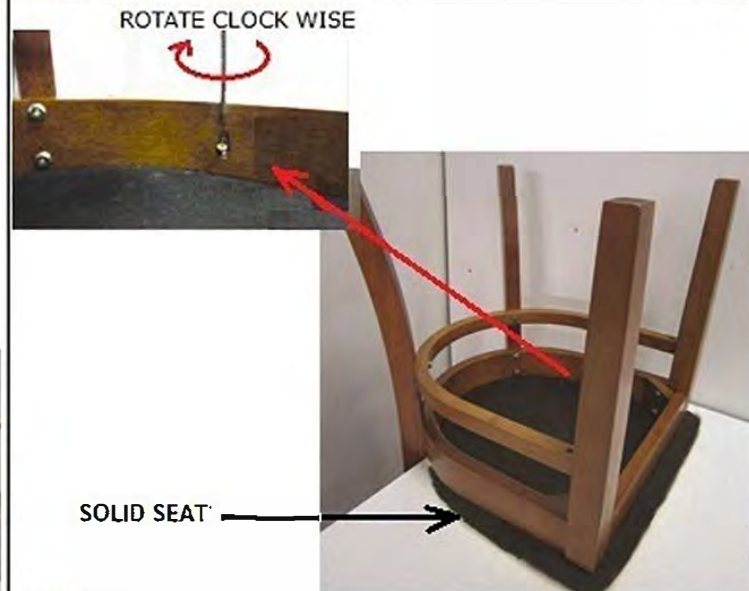

ROTATE CLOCK WISE

SOLID SEAT

### STEP 3

PUT THE SOLID SEAT ON TABLE THEN TURN AROUND THE CHAIR AND SCREW ON WITH M4 X 32MM CHIPBOARD SCREW TO THE CUSHION SEAT. (X 4)  
(SCREW DRIVER REQUIRED)



COMPLETED ASSEMBLY.

